



When deciding where to place the YP-SP5 make sure there is a minimum of 1 1/4" clearance from the front of the panel. Use a 2 1/8" hole saw to drill the mounting hole. Make sure that mounting tabs (3) are in the closed position. Place YP-SP5 through the mounting hole then tighten the 3 mounting screws (4) until the gasket starts to compress. Overtightening could cause damage to mounting tabs.

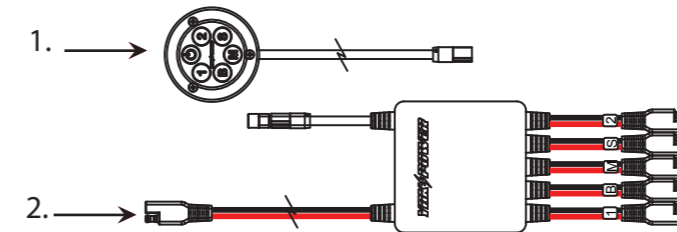

- Contents:
1. 1 ea.. YP-SP5
2. 1 ea.. YP-RP5




Optional RF Remote Module

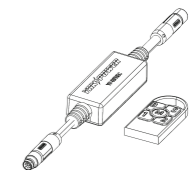

YP-RP5-RFM

General Warnings & Notations:



- All Yak-Power plug and play accessories are specifically designed to work together while maintaining the correct battery polarity throughout the entire Yak-Power system. Use of other aftermarket connectors or splicing other connectors into the Yak-Power system may cause damage to the system or to the accessories connected to the system and void your warranty.
- CAUTION:** Always pay attention to the actual wire colors of all Yak-Power accessory cables to insure that the RED (+) wire is always connecting to the RED (+) wire on the connector into which it is being plugged.

-  Power button: Turns on/off all power to the switching system. When activated keypad icons are backlight with a white light.
- 1** When pressed, button will activate pigtail 1 and turn red.
- 2** When pressed, button will activate pigtail 2 and turn red.
- B** When pressed, button will activate pigtail B (Bow) and turn red.
- M** When pressed, button will activate pigtail M (Midship) and turn red.
- S** When pressed, button will activate pigtail S (Stern) and turn red.

YP-RP5R Installation Instructions




Battery or Battery Box (YP-BBK) installed under hull

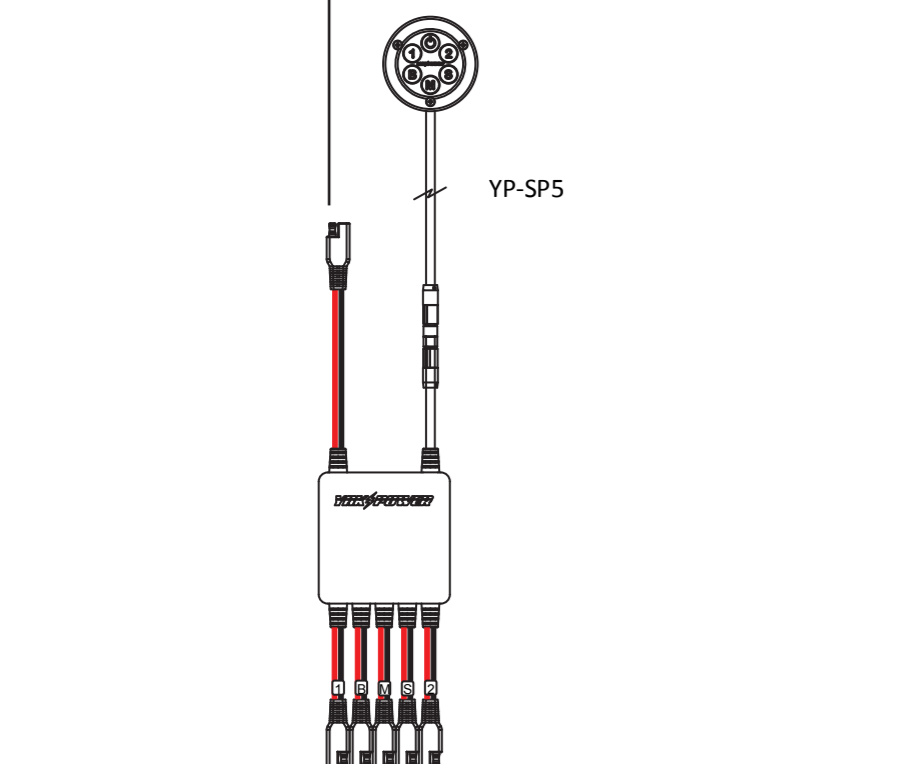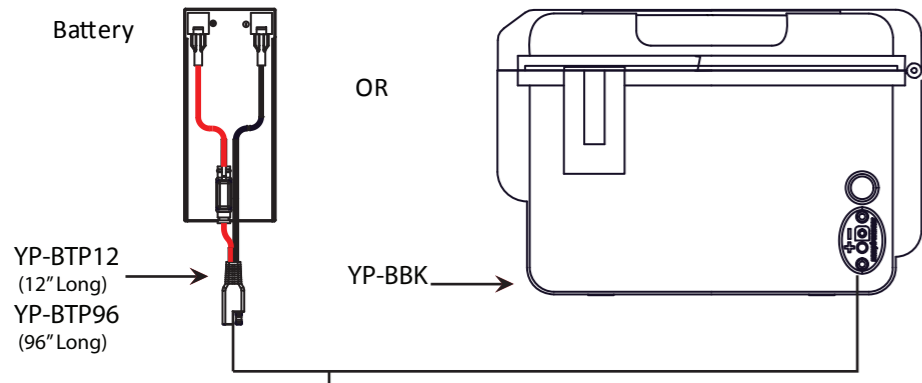


Output Attachment Options

5 outputs for a **maximum** total of a 15 amp load

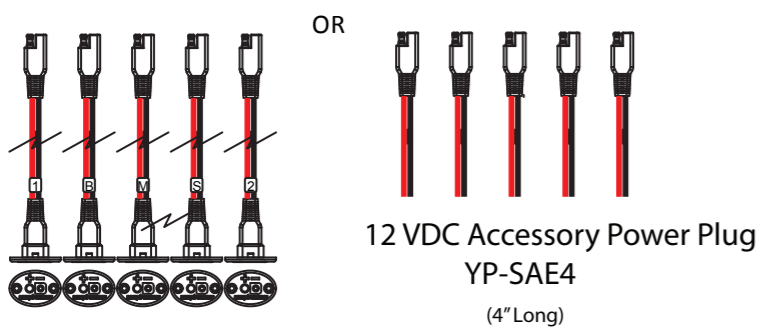



Power Ports
YP-PMC48S (48" Long)
YP-PMC96S (96" Long)
YP-PMC144S (144" Long)

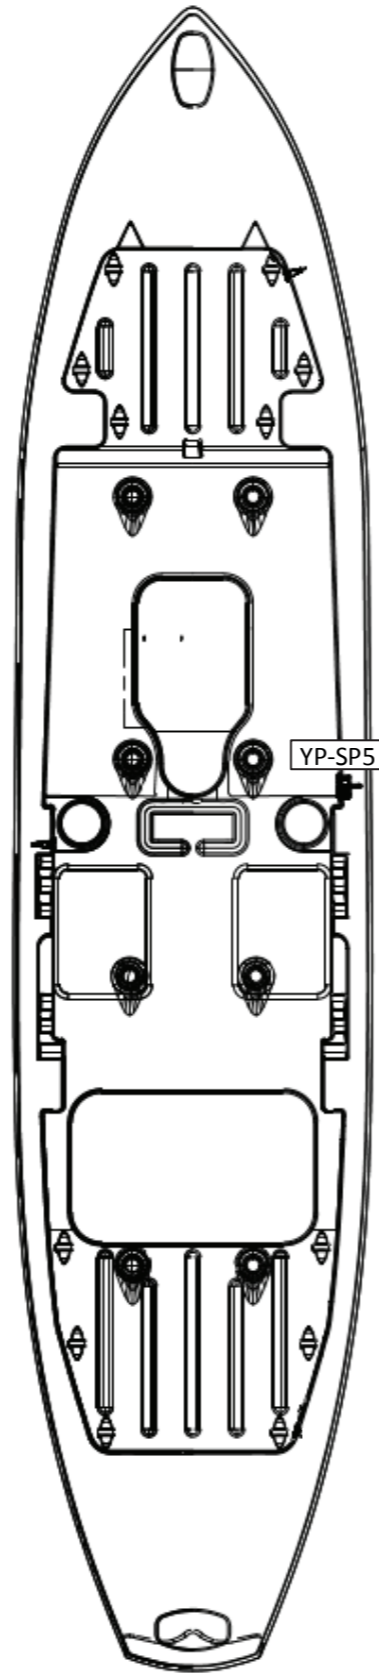

YP-RP5R Installation Instructions



Battery or Battery Box (YP-BBK) installed externally

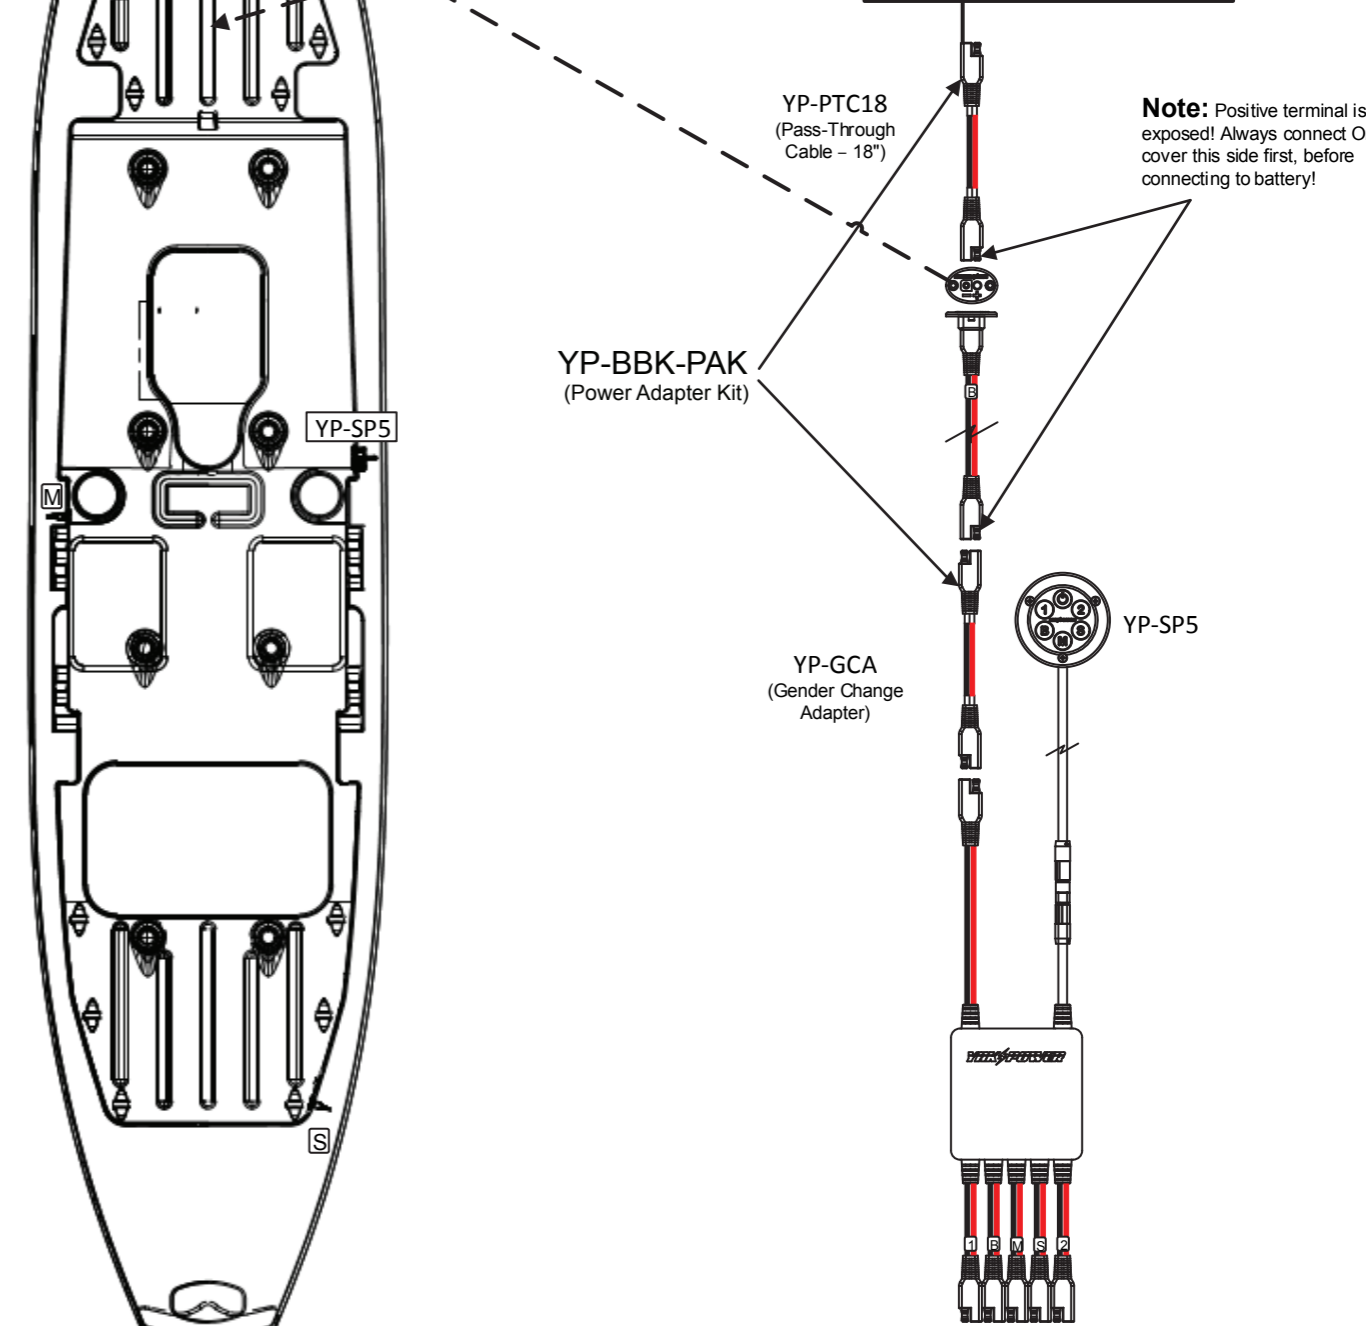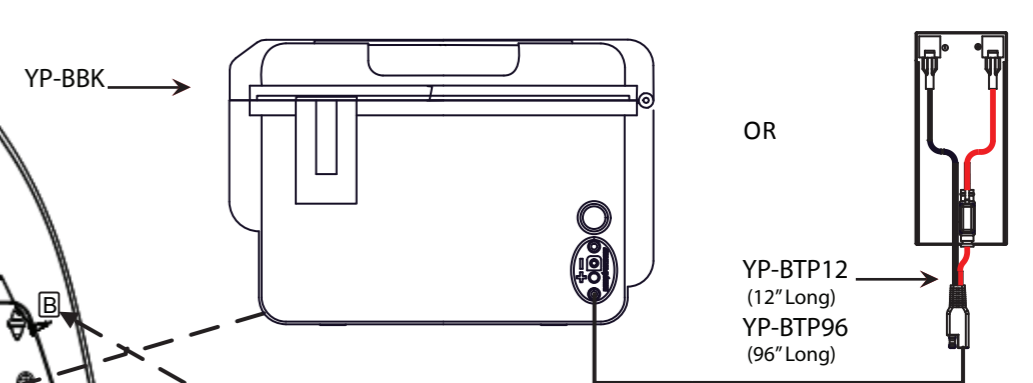

Note: Positive terminal is exposed! Always connect Or cover this side first, before connecting to battery!