

6100 / 6200 SERIES WINDSHIELDS

TABLE OF CONTENTS:

- Step 1** - Install Extrusions
- Step 2** - Install Windshield
- Step 3** - Install Upper Latches

PREPARE CAR FOR INSTALLATION:

- Remove the following:
- Factory Windshield
 - Rubber Grommets & Hardware (if present)

NOTE: Save original hardware for later use.

IMPORTANT: Do not fully tighten hardware until instructed.
Read through all instructions before beginning installation.

AVAILABLE FOR:
CLUB CAR® DS® & PRECEDENT®
E-Z-GO® TXT® & RXV®
YAMAHA® DRIVE® & G14-19, 22


STEP 1

INSTALL EXTRUSIONS


MOUNT EXTRUSIONS TO WINDSHIELD

Peel Protective Blue Film away from the edges, just enough to fully mount Extrusions

NOTE: Push Extrusions onto Windshield until fully seated.

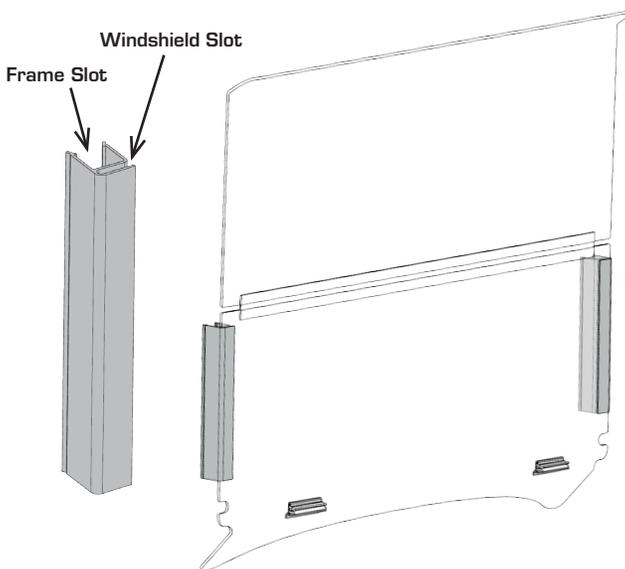

CLUB CAR PRECEDENT / E-Z-GO TXT / YAMAHA DRIVE

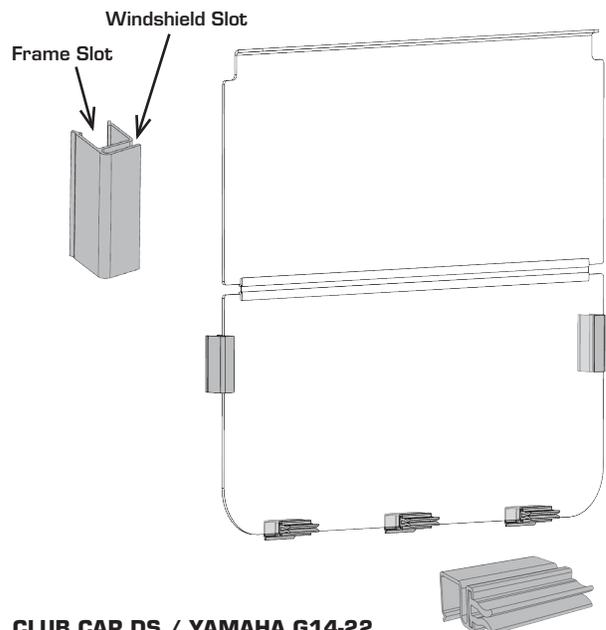


CLUB CAR DS / YAMAHA G14-22

STEP 2


INSTALL WINDSHIELD

MOUNT WINDSHIELD TO FRONT FRAME


NOTE: Fully tighten hardware.

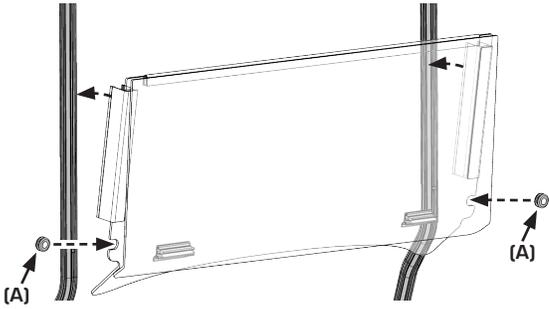



Insert grommets into slots on Windshield, then snap Extrusions & Windshield onto front frame.

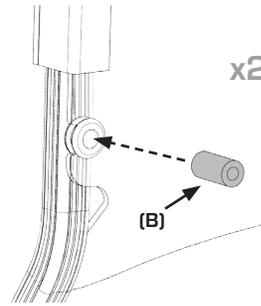


Slide Extrusion & Windshield until grommet aligns with hole in frame, then insert spacer. ↑ ↓

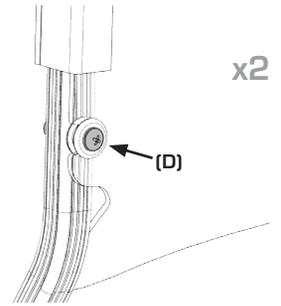


CLUB CAR PRECEDENT

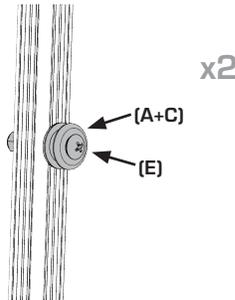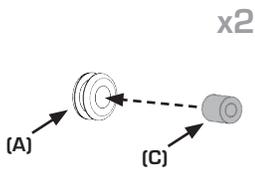

E-Z-GO TXT / YAMAHA DRIVE

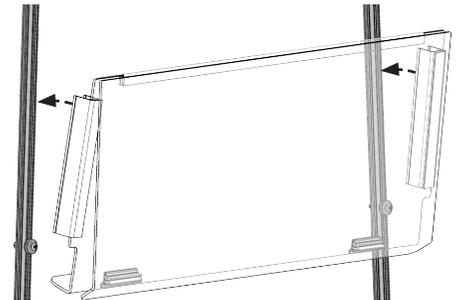

Snap Extrusions & Windshield onto front frame, then slide until Windshield sits on grommet. ↓

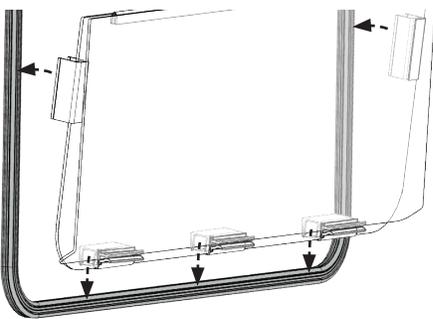

Push in and down at the same time to snap the Extrusions & Windshield onto the front frame.

CLUB CAR DS / YAMAHA G14-22

HARDWARE - SCALE 1:1


(A) x2



Rubber Grommet


HARDWARE - SCALE 1:1

(B) x2




1-1/2" Spacer

(C) x2




1/2" Spacer

(D) x2

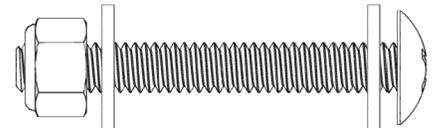

1/4" X 2" Truss Bolt - 1/4" Flat Washer (x2) - 1/4" Nyloc Nut

(E) x2

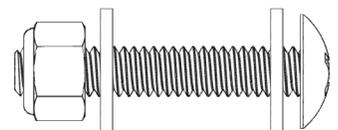


1/4" X 1-1/2" Truss Bolt - 1/4" Flat Washer (x2) - 1/4" Nyloc Nut

STEP 3


INSTALL UPPER LATCHES

MOUNT UPPER LATCHES TO FRONT FRAME

NOTE: Fully tighten hardware.

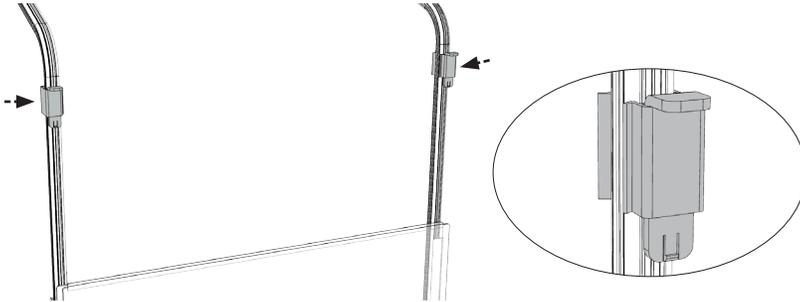


Snap Upper Latches onto front frame.

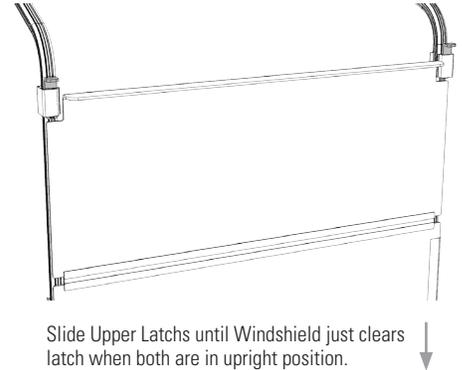

Slide Upper Latches until Windshield just clears latch when both are in upright position.

UPPER LATCH


****Optional****

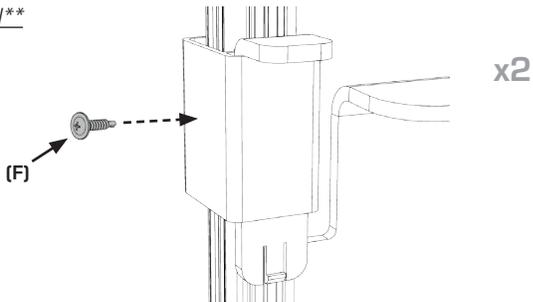

Optional: Use self-tapping screw and drill to permanently install Upper Latches.

HARDWARE - SCALE 1:1

(F) x2



3/4" Self Tapping Screw

THIS PAGE INTENTIONALLY LEFT BLANK