



AVAILABLE FOR:
 CLUB CAR® DS® & PRECEDENT®
 E-Z-GO® TXT® & RXV® / YAMAHA® DRIVE®

PATRIOT SEAT INSTALLATION

TABLE OF CONTENTS:

- Section 1** - Prepare Car for Installation
- Section 2** - Seat Back Support Installation
- Section 3** - Footrest Supports and Bumper Angle Installation
- Section 4** - Rear Seat Mounting
- Section 5** - Footrest Installation
- Section 6** - Cushion Installation

IMPORTANT: Do not fully tighten hardware until instructed.
 Read through all instructions before beginning installation.

OPTIONAL PATRIOT ACCESSORIES

Sold Separately



Chair Holder



Cup Holders



Drop-in Cargo Bed



Easy Access Step



Soft Cargo Carrier



Trailer Hitch

SECTION 1

PREPARE CAR FOR INSTALLATION

1:1 CAR PREPARATION

Remove the following items to prepare the car for Rear Seat Kit Installation:

- Top
- Top Supports/Drain Tubes
- Bench Back Cushion
- Bag Rack Assembly

NOTE: Save and separate factory hardware for later use.

SCALE HARDWARE GUIDE





Supplied hardware has been illustrated at a 1:1 scale for the ability to verify required lengths quickly and easily. Simply place the hardware on top of the illustration to ensure you are using the correct item and measurement.

SECTION 2



SEAT BACK SUPPORT INSTALLATION

2:1 POSITION AND INSTALL SEAT BACK SUPPORTS

NOTE: Fully tighten Bolts.

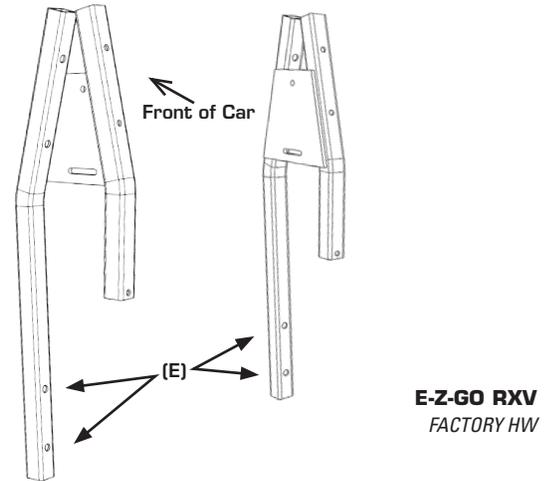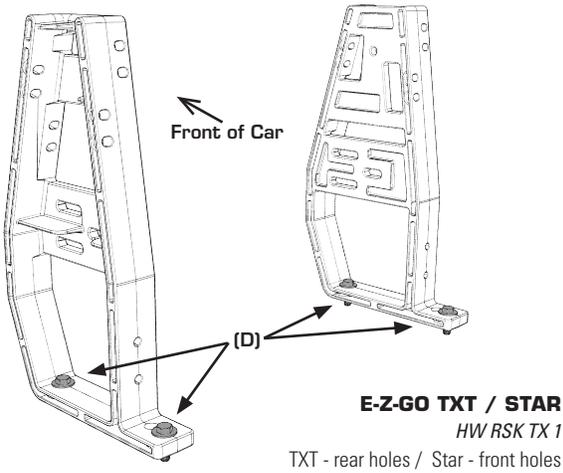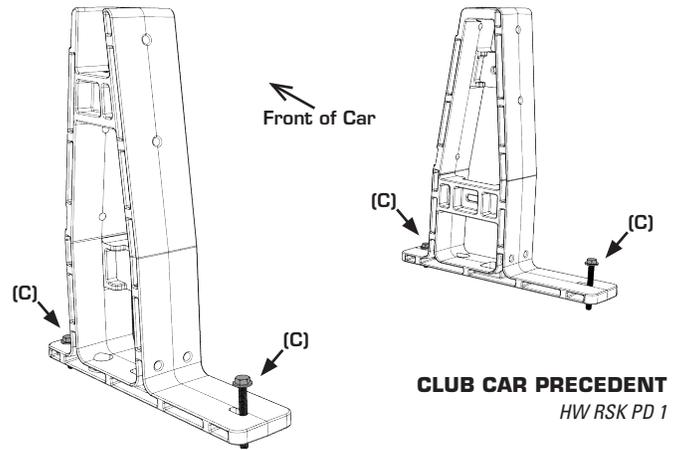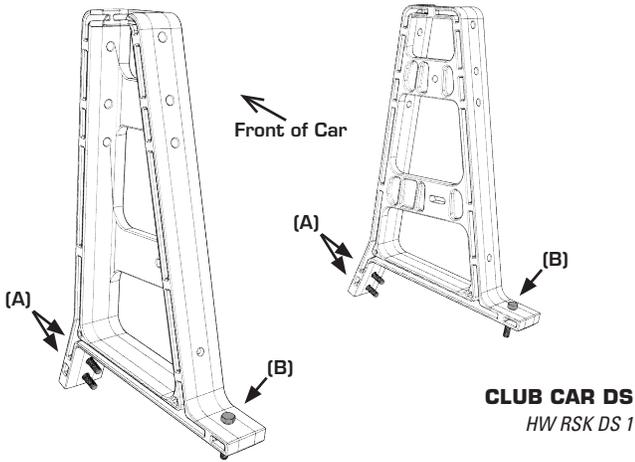

HARDWARE - SCALE 1:1

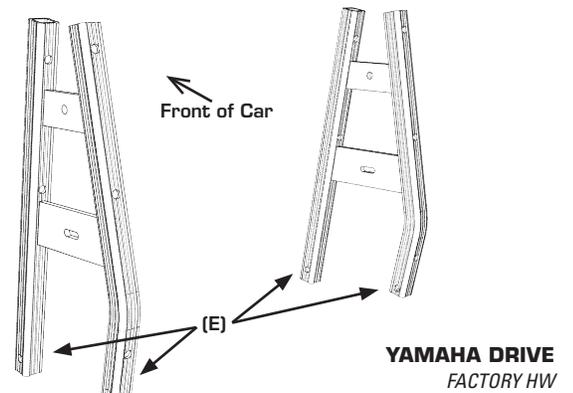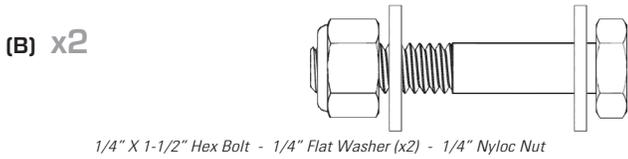

FACTORY HARDWARE




SECTION 3

FOOTREST SUPPORTS AND BUMPER ANGLE INSTALLATION

3:1 POSITION SEAT BASE & INSTALL SPACERS


Remove Rear Seat Base from box and place bottom side up for assembly.

NOTE: Place Seat on Cardboard or Blanket to prevent from scratching.

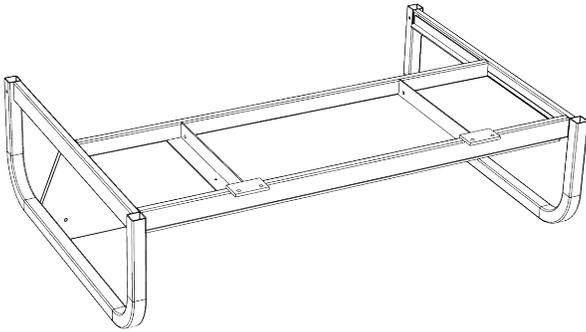

3:2 INSTALL FOOTREST SUPPORTS

NOTE: Fully tighten Hardware.

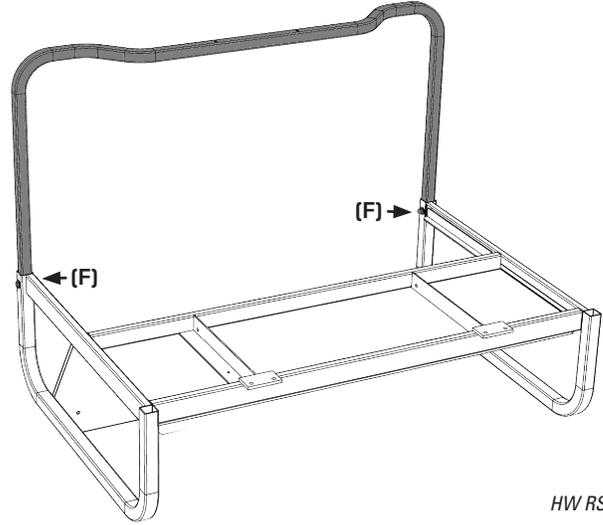


HW RSK PAT 4


3:3 INSTALL BUMPER ANGLE

NOTE: Fully tighten Hardware.


CLUB CAR DS
HW RSK PAT 4

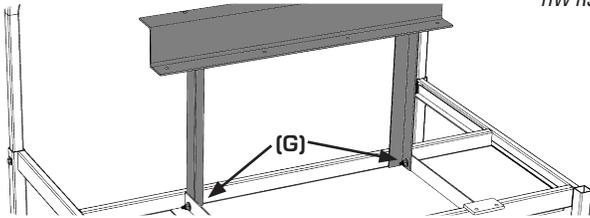


CLUB CAR PRECEDENT
HW RSK PAT 4

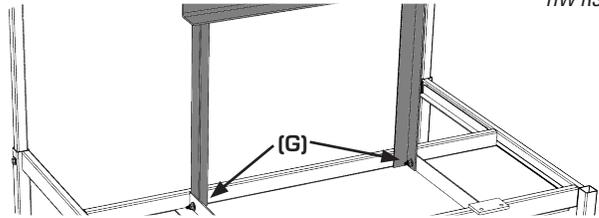


E-Z-GO TXT / STAR
HW RSK PAT 4

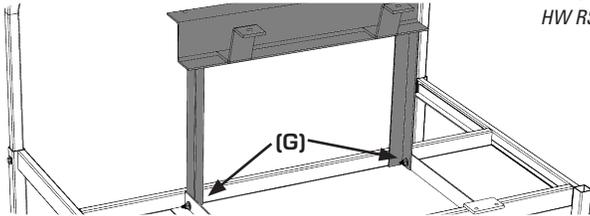

E-Z-GO RXV
HW RSK PAT 4

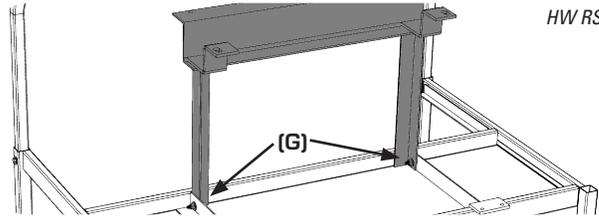


YAMAHA DRIVE
HW RSK PAT 4

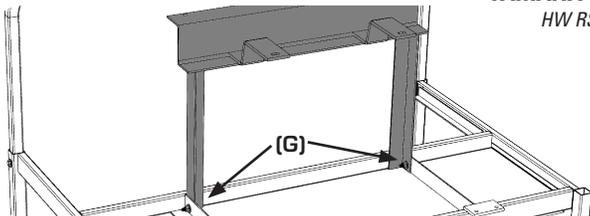


HARDWARE - SCALE 1:1

(F) x2

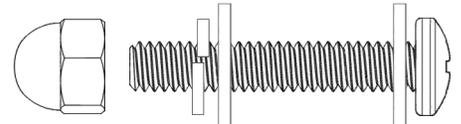

1/4" X 1-1/2" Pan Bolt - 1/4" Flat Washer (x2)
1/4" Lock Washer - 1/4" Acorn Nut





(G) x2

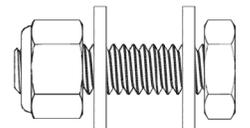

1/4" X 1" Hex Bolt - 1/4" Flat Washer (x2) - 1/4" Nyloc Nut

3:4 INSTALL REAR SEAT KIT BRACKETS


NOTE: Do not fully tighten Bolts until mounted to Seat Back Supports.

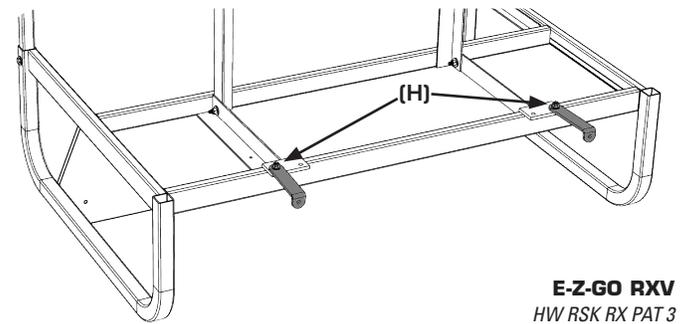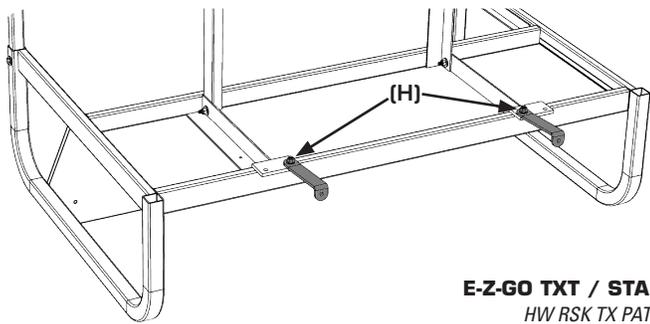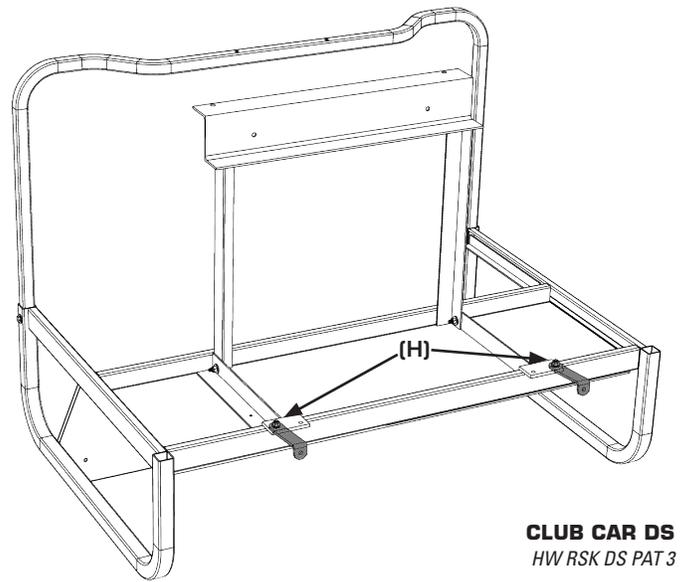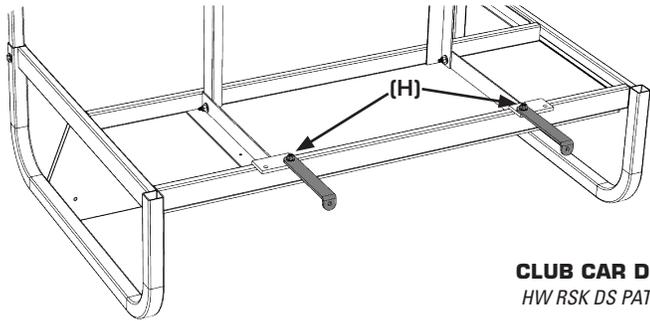

HARDWARE - SCALE 1:1

(H) x2

1/4" X 1" Hex Bolt - 1/4" Flat Washer (x2) - 1/4" Nylon Nut

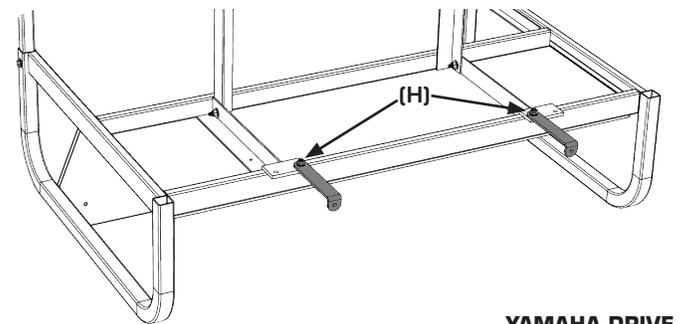


SECTION 4

REAR SEAT MOUNTING


4.1 ATTACH REAR SEAT KIT TO SEAT BACK SUPPORTS

Flip Rear Seat Base over and attach to Seat Back Supports.


NOTE: Do not fully tighten until Bumper Angle is attached in next step.

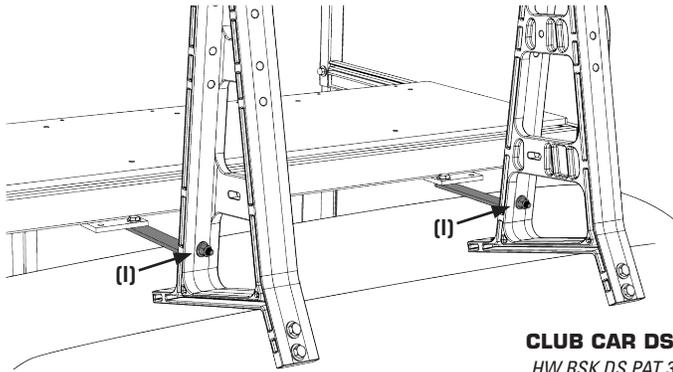


CLUB CAR DS
HW RSK DS PAT 3

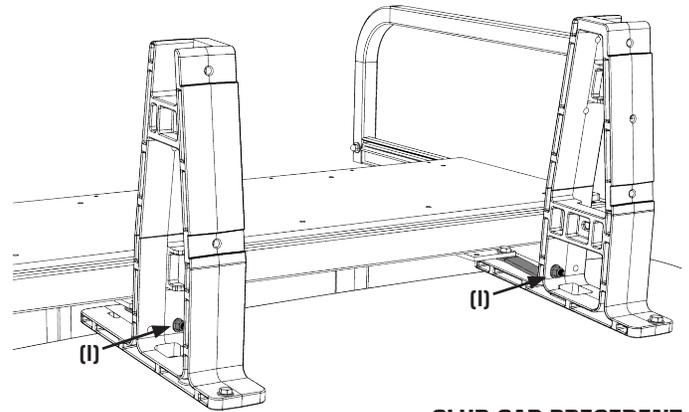


CLUB CAR PRECEDENT
HW RSK PD PAT 3

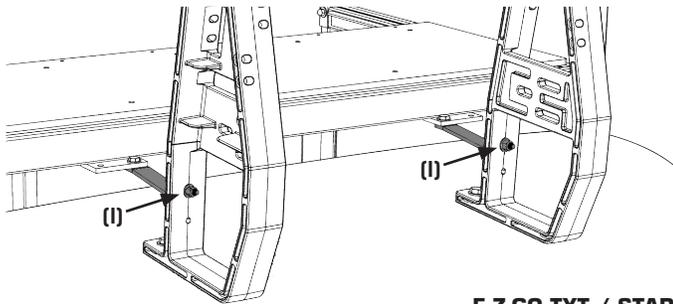

E-Z-GO TXT / STAR
HW RSK TX PAT 3
TXT - top holes / Star - bottom holes

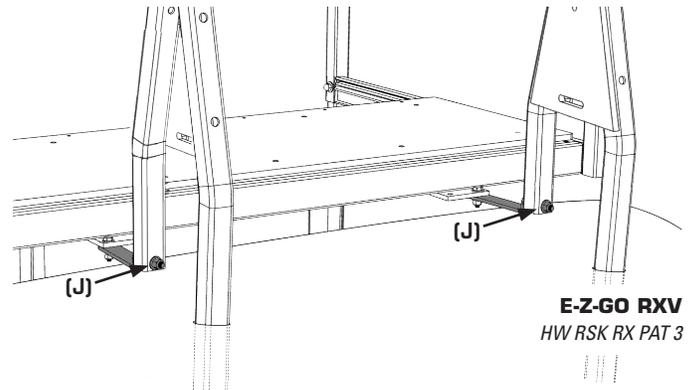


E-Z-GO RXV
HW RSK RX PAT 3

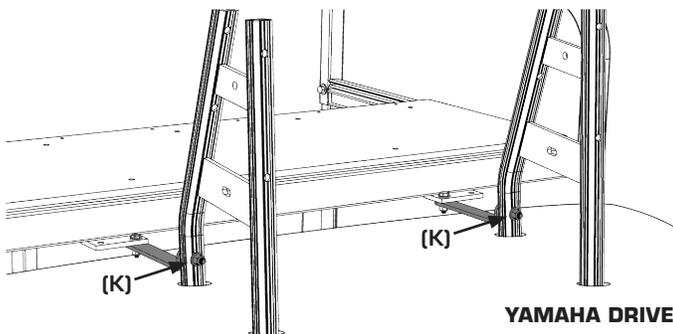

YAMAHA DRIVE
HW RSK DV PAT 3


HARDWARE - SCALE 1:1

(I) x2

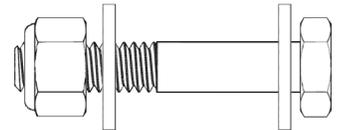


1/4" X 1-1/2" Hex Bolt - 1/4" Flat Washer (x2) - 1/4" Nylock Nut

(J) x2

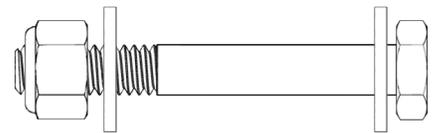

1/4" X 2" Hex Bolt - 1/4" Flat Washer (x2) - 1/4" Nylock Nut


(K) x2

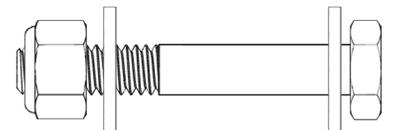


1/4" X 1-3/4" Hex Bolt - 1/4" Flat Washer (x2) - 1/4" Nylock Nut

4:2 MOUNT BUMPER ANGLE TO CAR


NOTE: Fully tighten Rear Seat Kit Brackets and Bumper Angle Hardware.

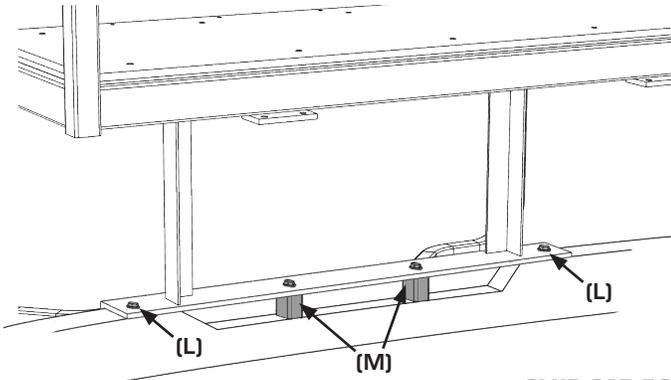


CLUB CAR DS
HW RSK DS 2

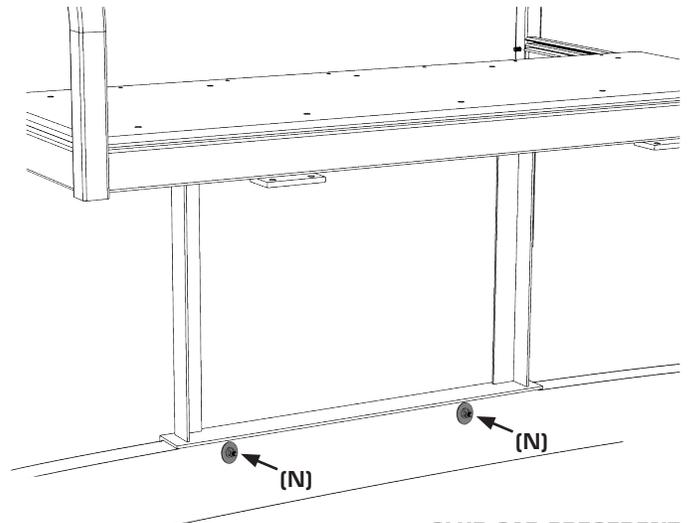

CLUB CAR PRECEDENT
HW RSK PD 2
Chase drill holes through car bumper

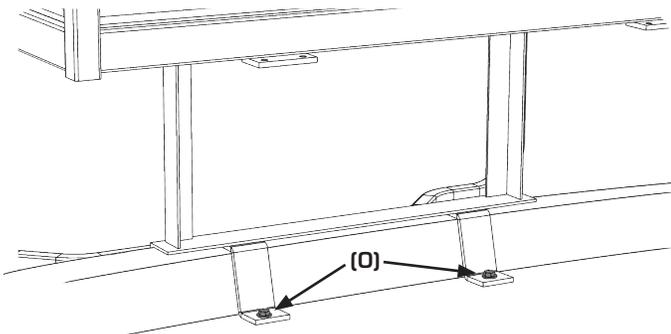


E-Z-GO TXT / STAR
HW RSK TX 2
Chase drill holes using existing holes in bagwell

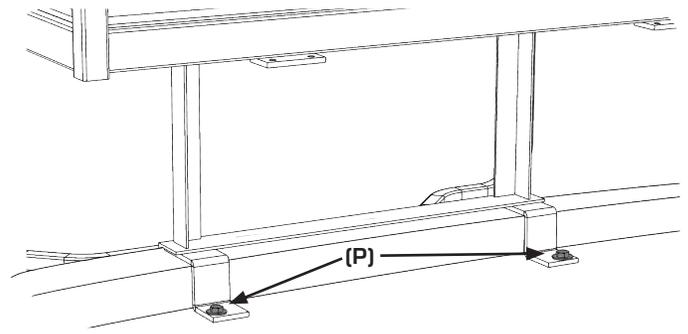

E-Z-GO RXV
HW RSK RX 2
Tabs will align with existing holes in bagwell

HARDWARE - SCALE 1:1

See Page 7

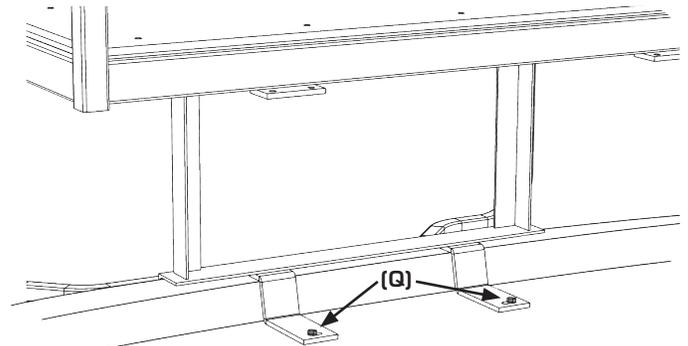


YAMAHA DRIVE
HW RSK DV 2
Tabs will align with existing holes in bagwell

SECTION 5

FOOTREST INSTALLATION

5:1 INSTALL FOOTREST


NOTE: Fully tighten Hardware.

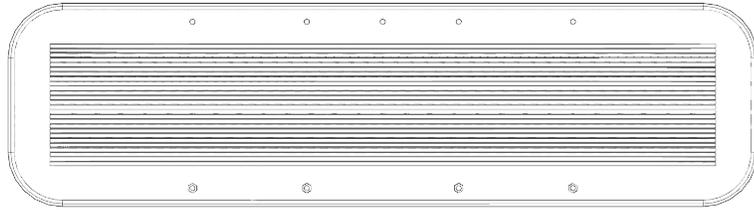

Side with 4 holes faces rear of car

HARDWARE - SCALE 1:1

(L) x2

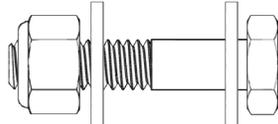


1/4" X 1-1/4" Hex Bolt - 1/4" Flat Washer (x2) - 1/4" Nylock Nut

(M) x2




1/4" X 2-1/2" Hex Bolt - 1/4" Flat Washer (x2) - Spacer Square - 1/4" Nylock Nut

(N) x2

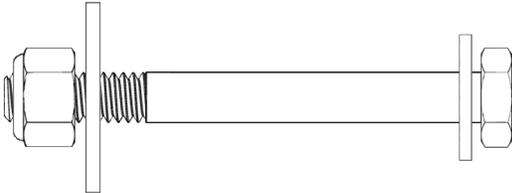


1/4" X 2-1/2" Hex Bolt - 1/4" Flat Washer - 1/4" Fender Washer - 1/4" Nylock Nut

(O) x2

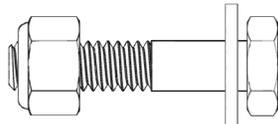


5/16" X 1-1/4" Hex Bolt - 5/16" Flat Washer - 5/16" Nylock Nut

(P) x2

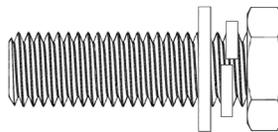


3/8" X 1-1/4" Hex Bolt - 3/8" Lock Washer - 3/8" Flat Washer

(Q) x2

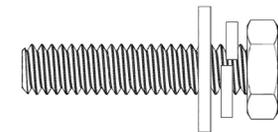

M6 x 30mm Hex Bolt - 1/4" Lock Washer - 1/4" Flat Washer

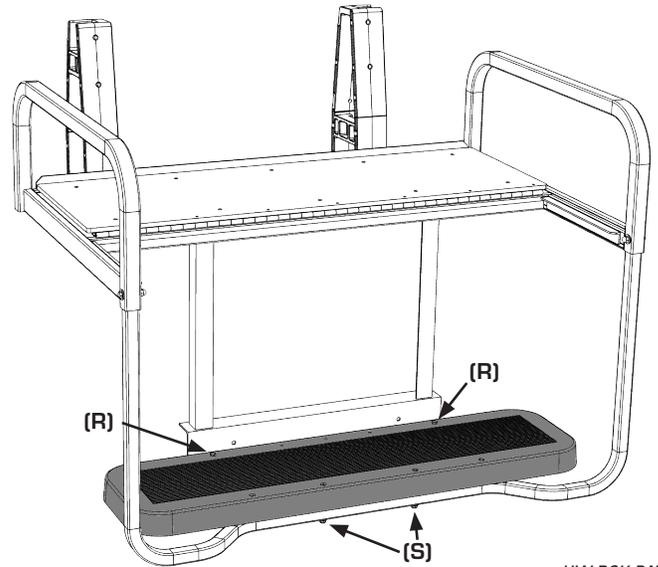


HW RSK PAT 4

Insert black fasteners in remaining open holes

HARDWARE - SCALE 1:1

(R) x2

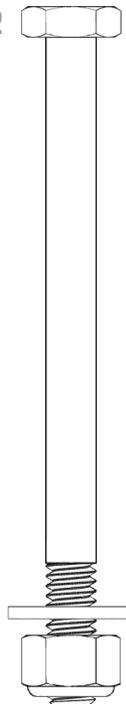

1/4" X 3-1/2" Hex Bolt
1/4" Flat Washer
1/4" Nylock Nut

(S) x2




1/4" X 2-3/4" Pan Head Screw
1/4" Flat Washer
1/4" Nylock Nut

SECTION 6

CUSHION INSTALLATION


6:1 SEAT BOTTOM CUSHION INSTALLATION

Insert Temporary Stud (S) into the 2/1 Seat Bottom Cushion then slip the 2/1 Strap (T) over the Temporary Stud as shown below.

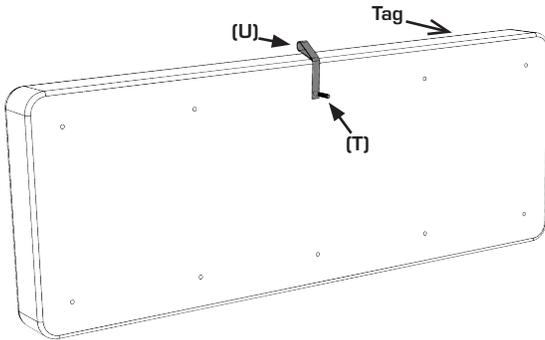


BOTTOM CUSHION
HW RSK CUSH PAT

Angle Seat Bottom Plastic upright to 90° and insert 2/1 Seat Bottom Cushion and the flip angle in the top center hole using the Temporary Stud.

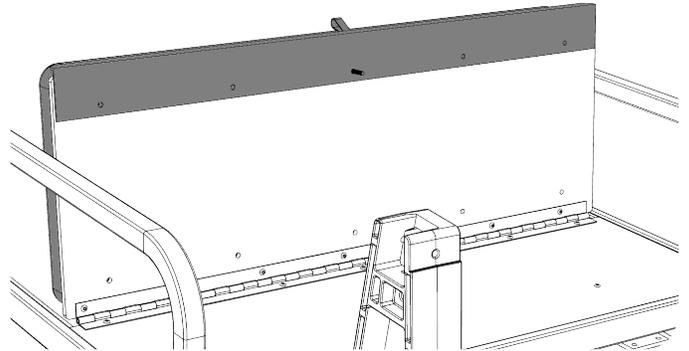

Loosely screw in all four corner holes first, then screw in the remaining vacant holes.


NOTE: Do not fully tighten.

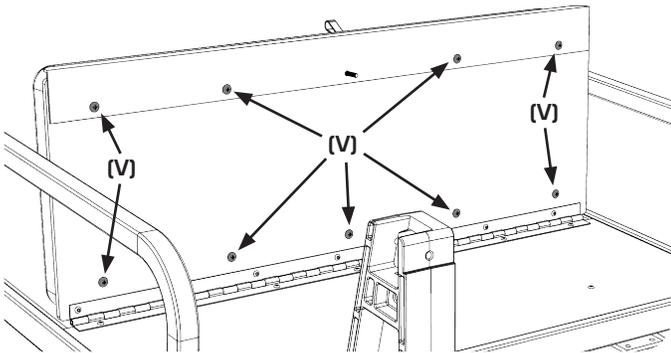

HW RSK CUSH PAT

Remove the Temporary Stud.


NOTE: Fully tighten Hardware.

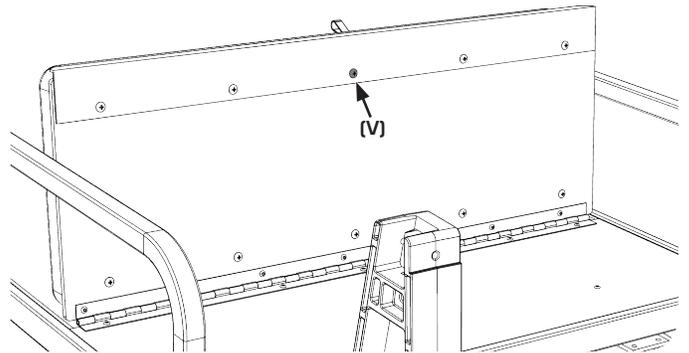

HW RSK CUSH PAT


HARDWARE - SCALE 1:1

(T) x1




Temporary Stud

(U) x1

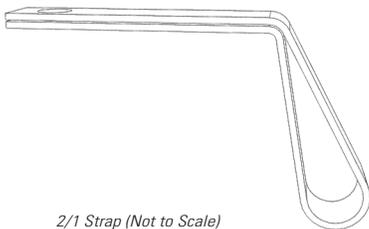

2/1 Strap (Not to Scale)

(V) x10



1/4" X 1" Truss Screw

6:2 SEAT BACK CUSHION INSTALLATION

Installation instructions are provided in the Seat Plate Kit Hardware Box, located in the 2/1 Cushion Box.

