



**Yamaha Drive G29 Upper Brush Guard
Installation Instructions
Part# 6294**

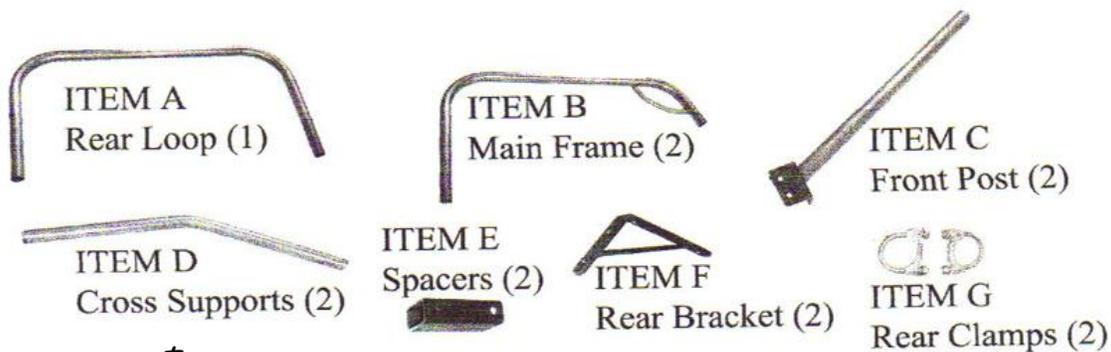

 *Always wear appropriate eye protection!*

1. Remove the rear basket and top from the cart.
2. Slide the rear loop (ITEM A) behind the seats as shown in picture 1.
3. Mount the rear brackets (ITEM F) to both seat backs using the supplied M8-1.25x20 bolts as shown in picture 1.
4. Loosely mount the rear brackets (ITEM F) to the rear loop using the rear clamps (ITEM G) as shown in picture 1.
5. If your cart does not have a top remove the rubber grommets on both sides of the front cowl where the stock top supports would mount. ****NOTE** If you are installing a Jake's front brush guard you must install it before you move to step 6!**
6. Using the supplied spacers (ITEM E) and supplied M8-1.25x70 bolts, mount the front posts (ITEM C) to the stock front top support location as shown in picture 2.
7. Mount the main frames (ITEM B) to both the front posts (ITEM C) using the supplied 7/16x2 1/4 bolts, washers & locknuts.
8. Mount the cross supports (ITEM D) to the main frames (ITEM B) using the supplied 7/16x2 1/4 bolts, washers & locknuts. ****NOTE** The front cross support angles to the front and the rear cross support angles to the rear.**
9. Securely tighten all nuts and bolts.
10. Reinstall basket if wanted.

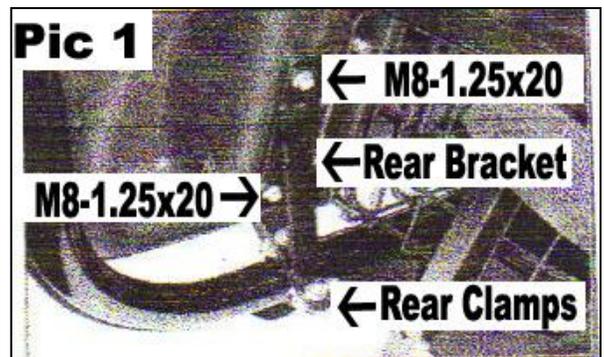

WARNING: This device does not provide roll-over protection.

NON-R.O.P.S. RATED



866-405-2537

www.jakesliftkits.com